


# INSTALLATION INSTRUCTION

1. Trough
2. Paver or Concrete
3. Leveling material
4. Brackets for leveling
5. Power feed inlet
6. Drainage material
7. Drainage hole

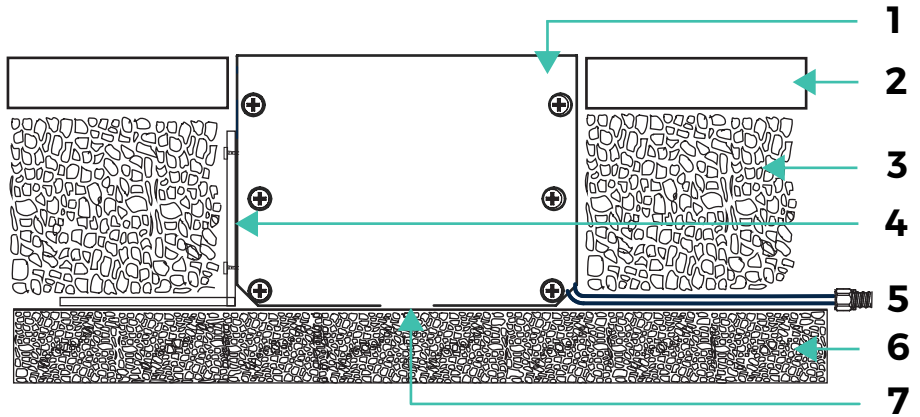

**1 Identify contents**

Trough

Bracket pre-attached to trough

Instruction Sheet

**2**

locate the correct case for each luminaire

**3**

Install case in suitable location making sure it is level

**4**

protective film

disposable brackets

TOP VIEW

Maintain width of opening with supplied disposable brackets - (Make sure the protective film is not removed until luminaire installation takes place)

**5** Ensure that the case is installed into a free draining location with drainage material underneath

Perform a drainage test once case is installed to ensure that water free drains. Luminaire must not be immersed in water for more than 30 minutes

**6**

Install power feed cables - making sure that the connections point is in an enclosure


**7**

Pave or finish groundworks

For installation of the **XTI | 5.0 Inground Uplight IP67 IK10+** please turn over page

# INSTALLATION INSTRUCTION

1. Luminaire
2. Fasteners
3. Driver
4. Case
5. Power connection

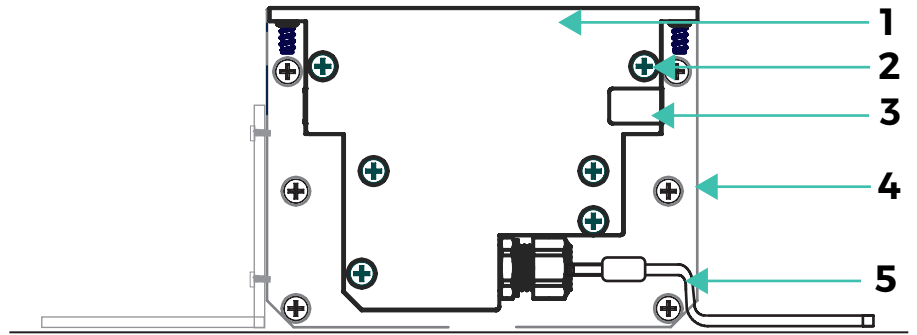

**1 Identify contents**

1 x Luminaire  
6 x Post torx fasteners  
1 x Instruction Sheet

**3** Locate correct luminaire with appropriate installed case.

**3** Make electrical connection

**4** Install luminaire ensuring the gap at the end and between luminaires is 1mm. Fix luminaire with supplied post torx fasteners

**5** If luminaire has remote drivers\*\*\*\*

Install drivers in a remote cabinet (not supplied), ensuring all external connections remain IP rated

Connect electrical cables ensuring that the cable lengths are all the same and do not exceed the maximum rated length

## WARNING

Luminaires are **NOT** site serviceable. Luminaires must be returned for any repair or maintenance. If luminaire is opened on site the warranty is **VOID**

If more information is required please contact your local representative by going to

[xerolighting.com/contacts](http://xerolighting.com/contacts) or email us at [headoffice@xerolighting.com](mailto:headoffice@xerolighting.com)