

INSTRUCTIONS

Caution:

- Luminaires are precision products and must be handled with extreme care. Incorrect handling can damage their internal electronics or compromise their integrity
- Luminaires must only be exposed to a temperature range between 5 degrees celsius and 40 degrees celsius throughout their life
- Luminaires and drivers must be isolated from electrostatic charges (ESD) and lightning strikes
- Luminaires must only be used with cables approved by Xero Lighting
- Luminaires are not site serviceable and should not be opened on site as this will compromise the IP rating. All servicing must be carried out off site by Xero Lighting






WIRE SUSPENSION




NSTALLATION INSTRUCTION


- Beam or support
- 2 Fastener
- 3 Ceiling
- 4 Rollerball barrel
- 5 Suspension Wire
- 6 Clutch
- 7 Endplate
- 8 Diffuser


Installer must ensure that the slot orientation in ceiling barrel allows suspension wire to remain perpendicular at all times in all orientations

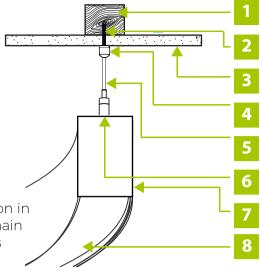


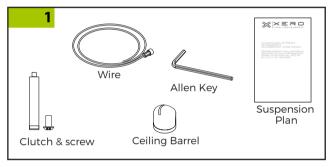





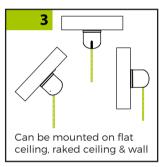


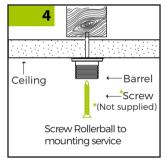


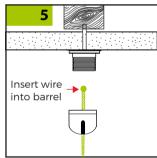


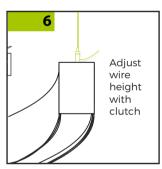

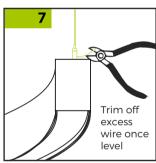

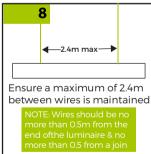

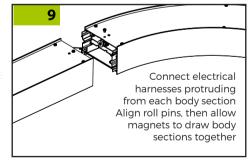

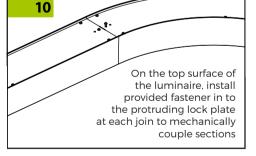







ROD SUSPENSION




INSTALLATION INSTRUCTION


- 1 Ceiling Mount
- 2 Tube Top
- 3 Tube
- 4 Tube Bottom Connector
- 5 Lock Nuts
- 6 Rod Bracket
- 7 Luminaire

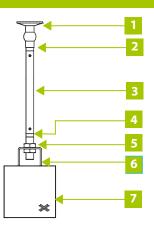


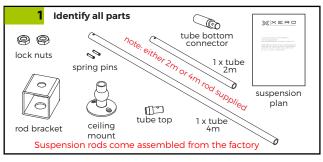




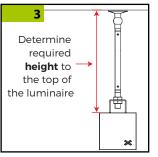


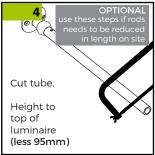


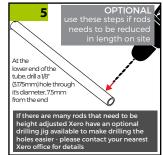


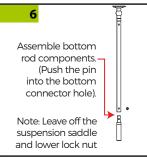



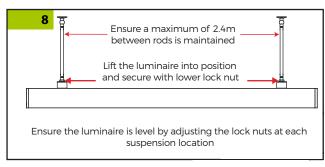

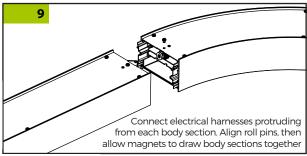

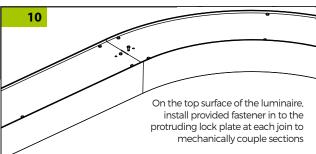







SURFACE MOUNT




INSTALLATION INSTRUCTION


- Beam or support
- 2 Ceiling
- 3 Fastener
- 4 Geartray
- 5 Profile wall
- 6 Light engine
- 7 Diffuser

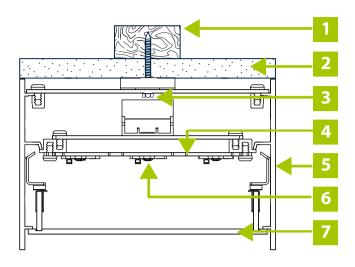

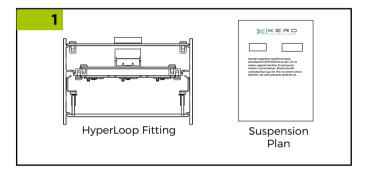





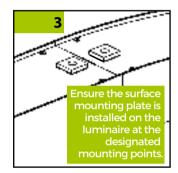


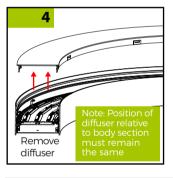



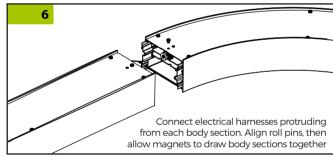

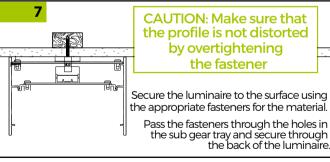

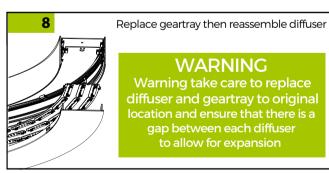





RECESSED MOUNT


(NOTE: Recessed clips are used)




The below Recessed instructions are for HyperLoop 3.0 to HyperLoop 3.6 (75mm - 90mm)


INSTALLATION INSTRUCTION


- Beam or support
- 2 Ceiling
- 3 Fastener
- 4 Geartray
- 5 Profile wall
- 6 Light engine
- 7 Diffuser

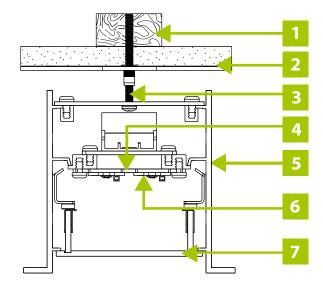

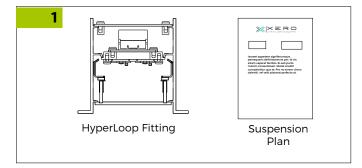



Determine mounting location

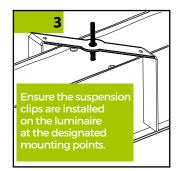


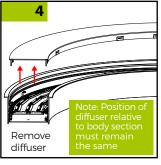





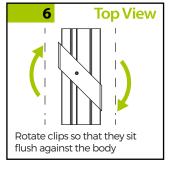

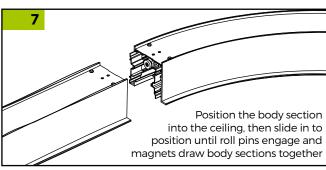

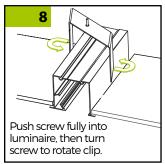

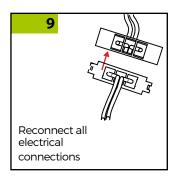

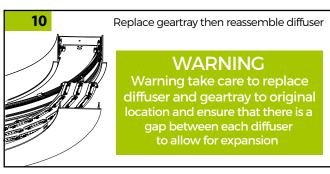





RECESSED MOUNT


(NOTE: **No** recessed clips are used)




The below Recessed instructions are for HyperLoop 3.8 to HyperLoop 6.0 (95mm - 150mm)


NSTALLATION INSTRUCTION


- Beam or support
- 2 Ceiling
- 3 Fastener
- 4 Geartray
- 5 Profile wall
- 6 Light engine
- 7 Diffuser

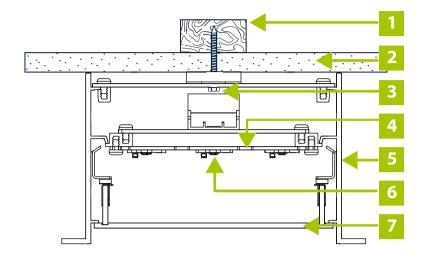

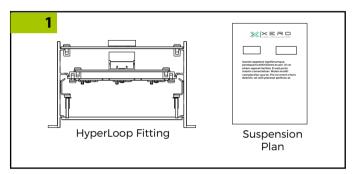





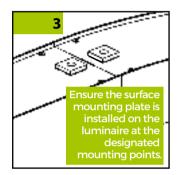


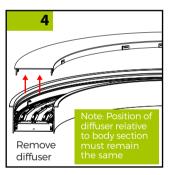




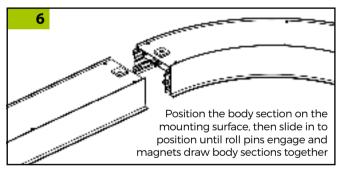

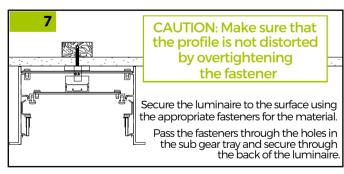

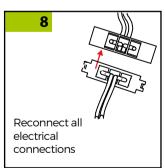

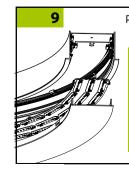

Replace geartray then reassemble diffuser

WARNING

Warning take care to replace diffuser and geartray to original location and ensure that there is a gap between each diffuser to allow for expansion

