


ROD SUSPENSION | IP55 version

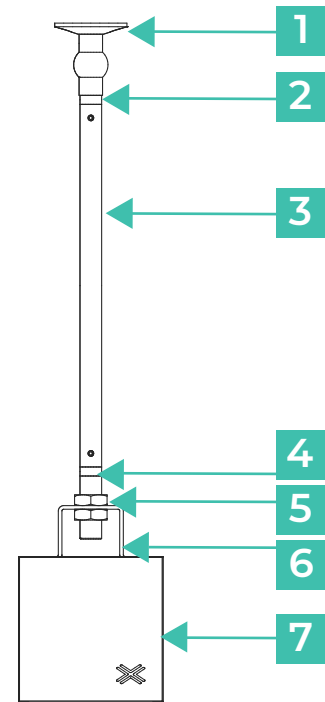

INSTALLATION INSTRUCTION

1. Ceiling Mount
2. Tube Top
3. Tube
4. Tube Bottom Connector
5. Lock Nuts
6. Suspension Saddle
7. Luminaire



1 Identify all parts

lock nuts
spring pins
suspension saddle
ceiling mount
tube top
tube bottom connector
1 x tube 2m
1 x tube 4m
suspension plan

note: either 2m or 4m rod supplied

Determine mounting location

3

Determine required **height** to the top of the luminaire

4 **OPTIONAL FOR NON STANDARD ROD LENGTHS**

Cut tube to length. Length = **height** (less 95mm)

5 **OPTIONAL FOR NON STANDARD ROD LENGTHS**

At the lower end of the tube, drill a 1/8" (3.175mm) hole through it's diameter, 7.5mm from the end

6

Assemble bottom rod components. (Push the pin into the bottom connector hole).

Note: Leave off the suspension saddle and lower lock nut

7

Fix the rod assemblies at the pre-determined locations

8

Remove the luminaire's outer end cap

9

Slide suspension saddles along the fitting to align with the rod assemblies and replace outer end cap

10

Ensure a maximum of 3m between rods is maintained

Lift the luminaire in to position and secure with lower lock nut

Ensure the luminaire is level by adjusting the lock nuts at each suspension location



ROD SUSPENSION | IP55 version (cont)

