

# XM3 Canopy Kit

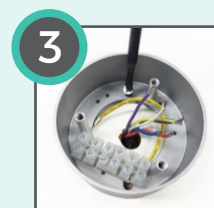
## INSTRUCTIONS FOR FLEX



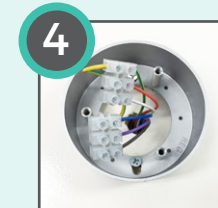
1 Remove magnetically attached XM3 cosmetic plate taking care not to damage surrounding lip. For **flex** drill out a 12mm hole in the cosmetic plate and insert supplied gland.



2 Undo three screws and remove tool plate.  
\*Drill 14mm hole in centre hole of tool plate



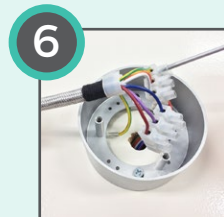
3 Fix XM3 Canopy shell to ceiling through 5mm slots (fasteners not included)



4 Connect power feed cable as per markings



5 Slide XM3 cosmetic plate onto **flex cable**. Then install cord grip on flex



6 Connect **flex cable** into XM3 canopy block



7 Reinstall tool plate



8 Reinstall XM3 cosmetic plate

## INSTRUCTIONS FOR WIRE



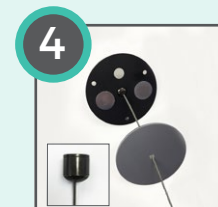
1 Remove magnetically attached XM3 cosmetic plate taking care not to damage surrounding lip.



2 Undo three screws and remove tool plate



3 Fix XM3 Canopy shell to ceiling through 5mm slots (fasteners not included)



4 Slide cosmetic plate through **suspension wire**, ensuring Rollerball is on the inside of the tool plate

Rollerball



5 Reinstall tool plate





6 Reinstall XM3 cosmetic plate

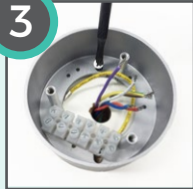
If more information is required please contact your local representative by going to [xerolighting.com/contacts](http://xerolighting.com/contacts) or email us at [headoffice@xerolighting.com](mailto:headoffice@xerolighting.com)

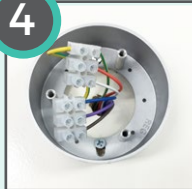
# XM3 Canopy Kit


## INSTRUCTIONS FOR FLEX & WIRE

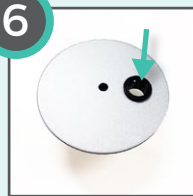
- 

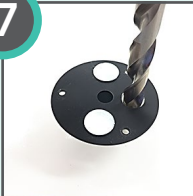
Remove magnetically attached XM3 cosmetic plate taking care not to damage surrounding lip
- 


Undo three screws and remove tool plate
- 

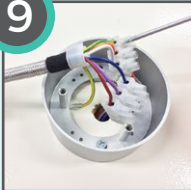
Fix XM3 Canopy shell to ceiling through 5mm slots (fasteners not included)
- 


Connect power feed cable as per markings
- 


Drill out outboard hole in cosmetic plate to 12mm
- 

insert supplied gland
- 

Drill clearance hole in tool-plate to 14mm
- 

Slide XM3 cosmetic plate onto flex cable. Then install cord grip onto flex cable. Slide cosmetic plate through suspension wire, ensuring Rollerball is on the inside of the tool plate
- 

Connect flex cable into XM3 canopy block
- 

Reinstall tool plate
- 

Reinstall XM3 cosmetic plate

If more information is required please contact your local representative by going to [xerolighting.com/contacts](http://xerolighting.com/contacts) or email us at [headoffice@xerolighting.com](mailto:headoffice@xerolighting.com)