


INSTALLATION INSTRUCTION

- 1 Ceiling Mount
- 2 Tube Top
- 3 Tube
- 4 Tube Bottom Connector
- 5 Lock Nuts
- 6 Rod Bracket
- 7 Luminaire

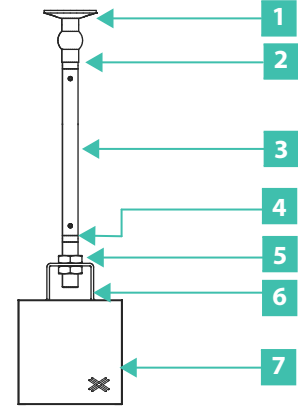

1 Identify all parts

lock nuts
spring pins
rod bracket
ceiling mount
tube top
tube bottom connector
1 x tube 2m
1 x tube 4m
suspension plan

note: either 2m or 4m rod supplied

Suspension rods come assembled from the factory

Determine mounting location

3

Determine required **height** to the top of the luminaire

4

OPTIONAL
use these steps if rods need to be reduced in length on site

Cut tube.

Height to top of luminaire (less 95mm)

5

OPTIONAL
use these steps if rods need to be reduced in length on site

At the lower end of the tube, drill a 1/8" (3.175mm) hole through its diameter, 7.5mm from the end

If there are many rods that need to be height adjusted Xero have an optional drilling jig available to make drilling the holes easier - please contact your nearest Xero office for details

6

Assemble bottom rod components. (Push the pin into the bottom connector hole).

Note: Leave off the suspension saddle and lower lock nut

7

Fix the rod assemblies at locations shown on the shop drawing. For curved sections this must be accurate as these are not adjustable

8 For straight sections only

Remove the luminaire outer end cap

9 For straight sections only

Slide suspension saddles along the fitting to align with the rod assemblies and replace outer end cap

10 For curved sections only

Remove diffuser

Note: Position of diffuser relative to body section must remain the same

11 For curved sections only

Remove geartray

Note: Only remove the plain steel fasteners. DO NOT remove the black fasteners

12 For curved sections only

Position rod bracket over pre-drilled hole in profile. Screw bolt into rod bracket

13

If more than one piece do up the latch

14

If the latch does not bring sections together adjust latch hook by turning hook

15

Ensure a maximum of 3m between rods is maintained

Lift the luminaire into position and secure with lower lock nut

Ensure the luminaire is level by adjusting the lock nuts at each suspension location

16 For curved sections only

Replace geartray, then reassemble diffuser

WARNING
Take care to replace diffuser and geartray to original location

If more information is required please contact your local representative by going to xerolighting.com/contact or email us at headoffice@xerolighting.com

